


KONTROL DJ - KDJ500 MAPPING FOR DECKADANCE:

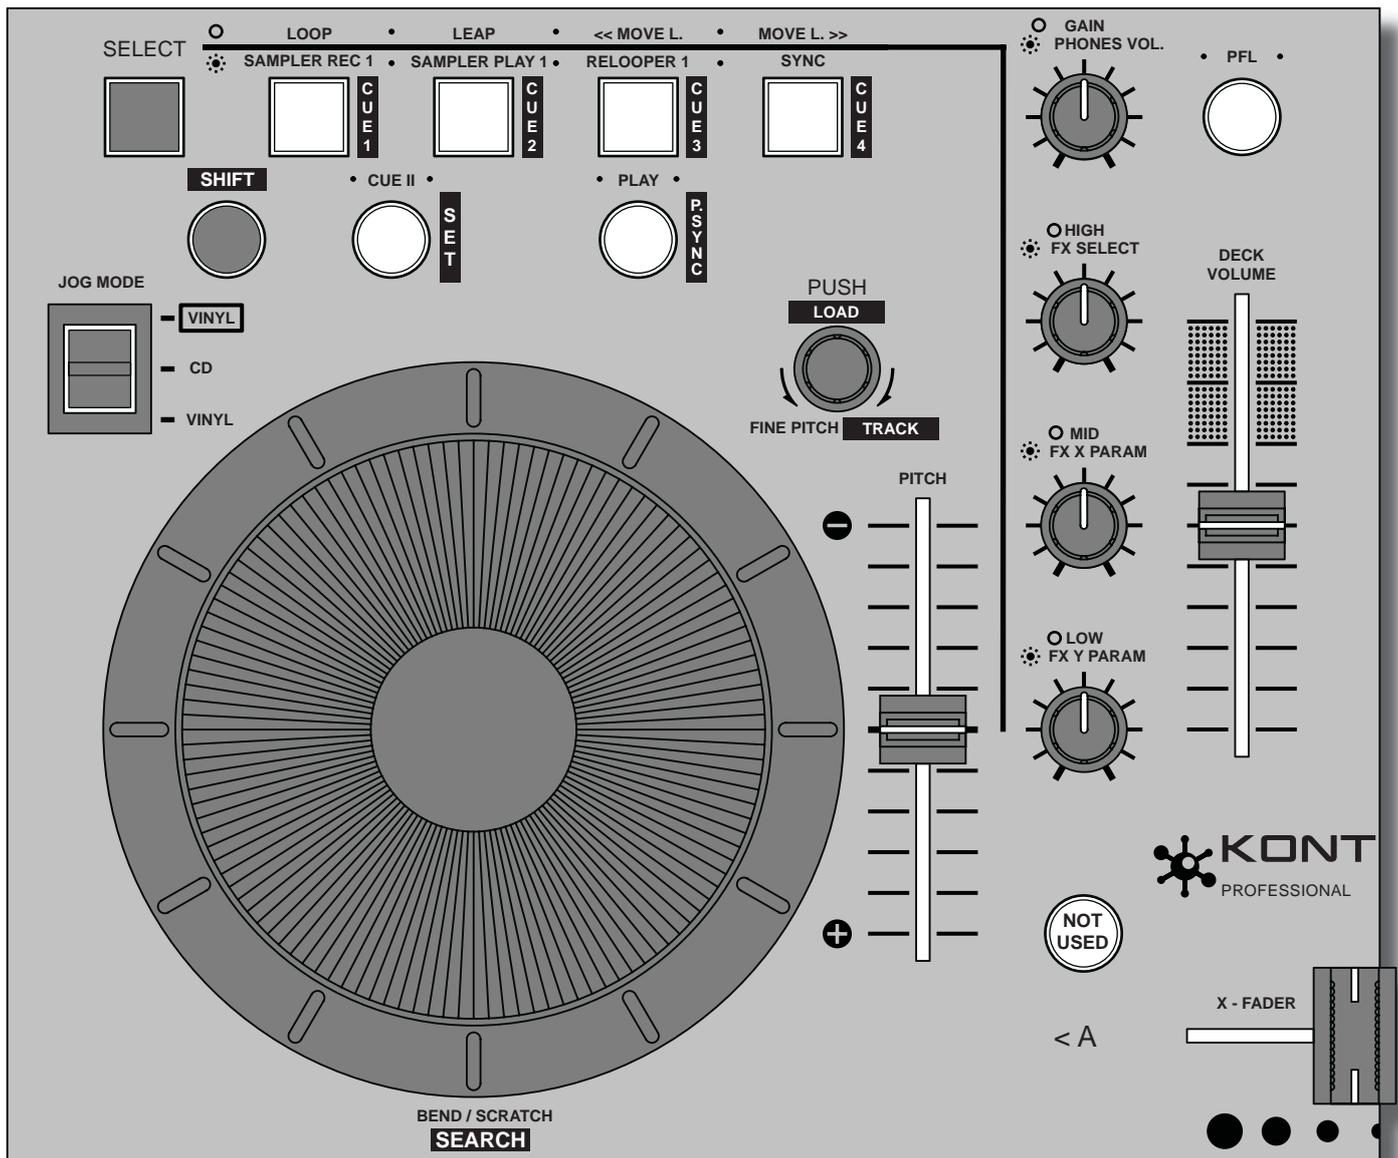

IMPORTANT NOTES:

- Only the square [SELECT] button is used to switch between the two banks of functions available for the 4 square buttons and 4 rotary knobs. The round (SELECT) button is “not used” and shouldn’t be pressed, this round button is lit when we are in bank 1 and is blinking at the song bpm when we are in bank 2.
- You can notice that sometimes the rotary knobs doesn’t do anything and probably you will think that they don’t work, well this is not true. The native support of the KDJ500 by Deckadance takes care of the position of the knobs in banks 1 and 2. This mean that when you switched the banks to use the rotary knobs for EQ or FX then Deckadance remember their positions to avoid unwanted jumps. This is called in some programs “soft takeover” but we prefer to call it “pot autotracking”
- The small push encoder is used to control the fine pitch but take into account that if you hold down the [SHIFT] button and turn the push encoder then it scrolls the playlist. If you hold down the [SHIFT] button and press the push encoder then the selected song will be loaded into the deck.